



7-PIECE ELECTRONIC DRUM KIT

SKU: LYXEDS750

Assembly Guide

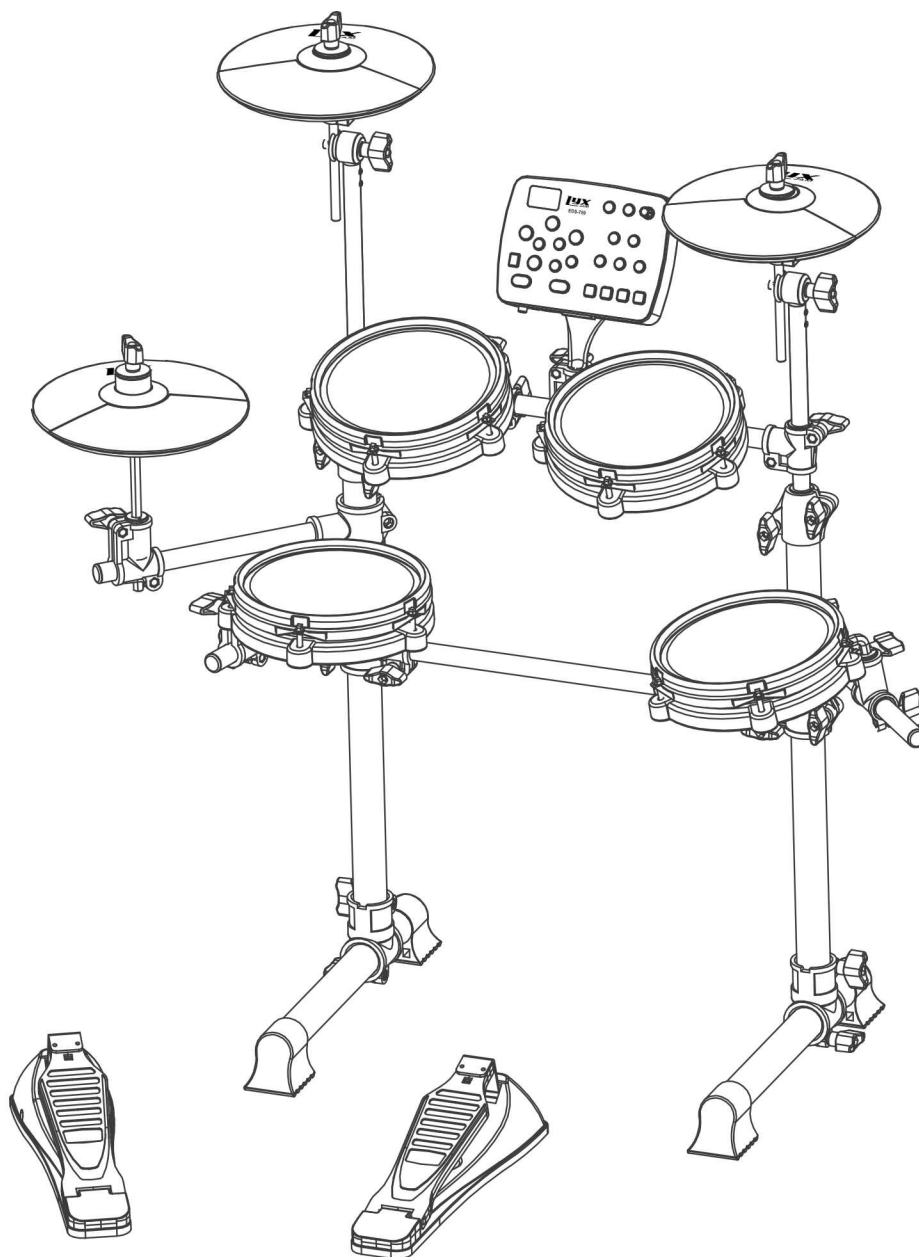


TABLE OF CONTENTS

FEATURES	2
SAFETY PRECAUTIONS	2
PARTS	3
ASSEMBLY INSTRUCTIONS	4
SPECIFICATIONS	6
WARRANTY	7

Thank you for purchasing the LyxPro™ 7-Piece Electronic Drum Kit. This Assembly Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this Assembly Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only. It is not intended for commercial use.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

FEATURES



- Drum in a variety of environments: with headphones in your room, or connect to a sound system and play with a band.
- Plug in your computer to customize and trigger your own drum sounds.
- 50 pre-recorded songs for you to play along.
- Tailor drums and cymbals to your personal preferences.
- Rim effects standard on all pads and cymbals for a true drumming experience.

SAFETY PRECAUTIONS

- Please make sure you have thoroughly read and understood these instructions, as improper assembly of this drum kit could lead to personal injury or property damage.
- Make sure to set up this drum kit on a level, hard surface.
- Make sure that you install all parts in the order described without mixing up parts. Switching parts could be detrimental to the performance of this product.
- Do not allow children to assemble or play on this device.
- Always make sure to fully tighten the bolts after attaching parts to the kit.

PARTS


- 1. Feet (2)
- 2. Drum rack (1)
- 3. Cymbal rods and fasteners (wing nut, washer, felt pad) (3)
- 4. Hex rods (4)
- 5. Rod sleeves (5)
- 6. Cymbal pads (3)
- 7. Snare pad (1) and tom pads (3)
- 8. Kick pedal (1)
- 9. Hi-hat controller (1)
- 10. Sound module (1)

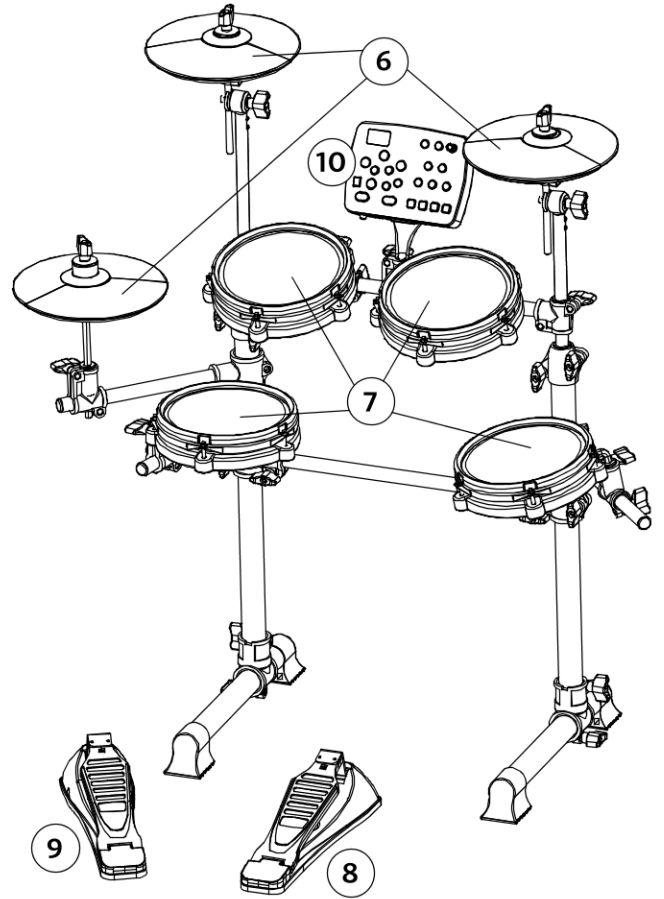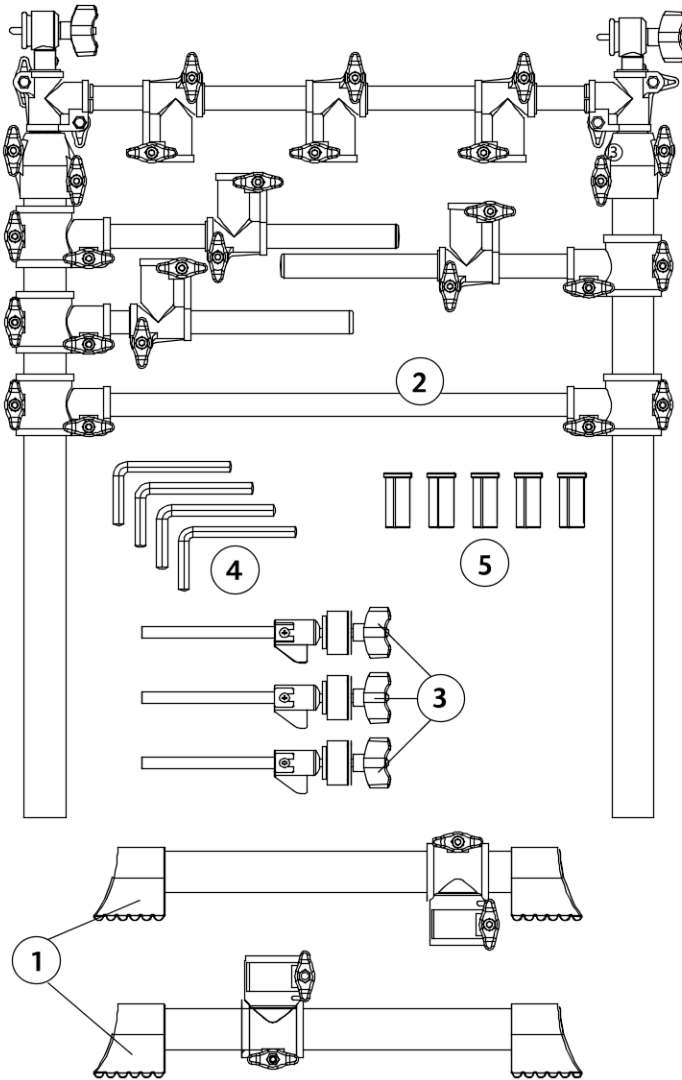


ACCESSORIES FOR ASSEMBLY:



 
Philips screwdriver (1)



Slotted screwdriver (1)

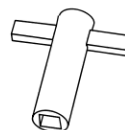

Key (1)

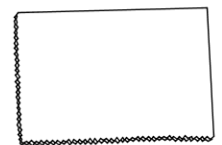

Cleaning cloth (1)




Self-fastening straps




Audio adapter (1)

ASSEMBLY INSTRUCTIONS



1. Place the feet on the floor and adjust the position of the clamps for the drum rack. Adjust the feet as needed to ensure the legs sit level on the floor.
2. Insert the frame into the slots on the feet. Place the frame on the floor and swing the arms away from the center.
3. Tighten the clamps to secure the frame to the feet.
4. Insert the rod sleeves into the clamps on the frame as shown in the diagram.
5. Insert two (2) of the cymbal rods into the clamps on top of the frame, and insert the third rod into the sleeve on the left arm as shown for the hi-hat cymbal pad. Tighten the wingnuts to secure the rods.
6. Insert the hex rods into their corresponding sleeves, then tighten the wingnuts to secure the rods to the frame.

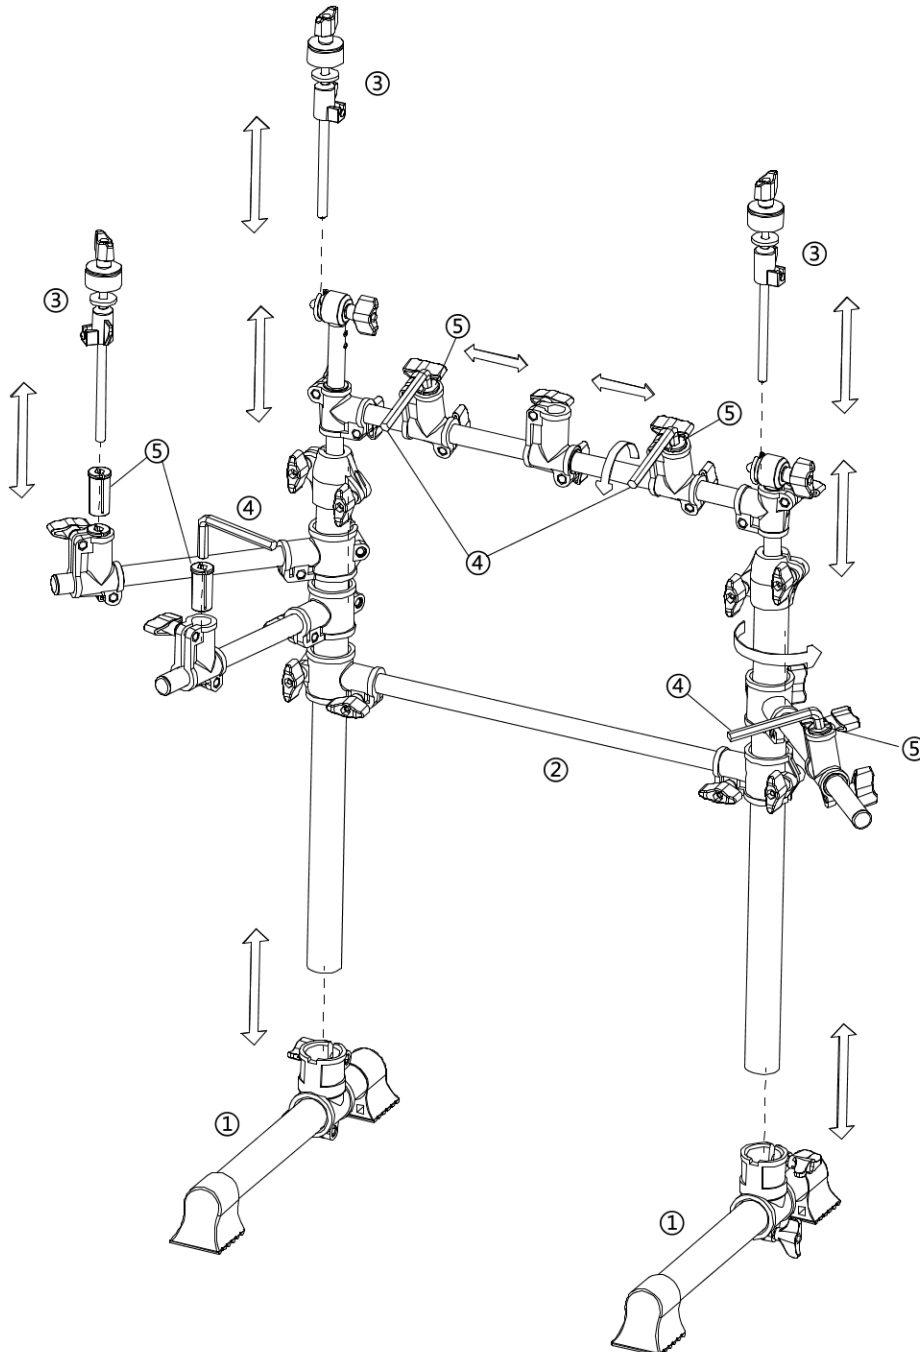

7. Remove the wingnut, washer, and felt pad from the cymbal rods.
8. Attach the cymbal pad onto the rod, and then reinstall the felt pad, washer, and wingnut, in that order. Tighten the wingnut until the pad wobbles slightly to mimic a real cymbal.

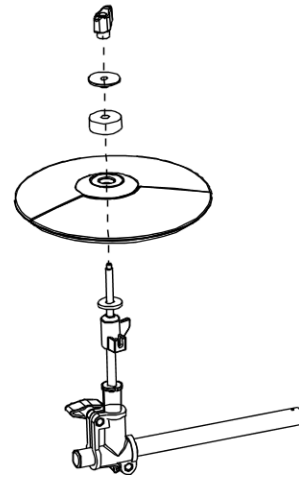


9. Connect the tom pads and snare pad to the rods by aligning the holes on the side of each pad with the rod, then carefully sliding the rod through the holes. After attaching the pads, tighten the knobs underneath to secure them in place.

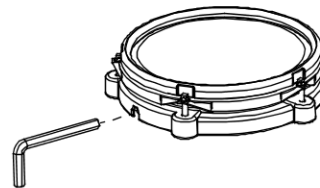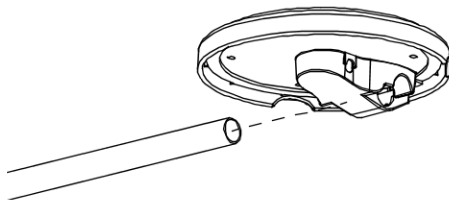


10. Place both pedals on the floor, with the pedal marked KICK on the right, and the hi-hat controller pedal on the left.

NOTE: To play the hi-hat with an open sound, strike the cymbal pad with a drumstick. To play it with a closed sound, depress the hi-hat controller pedal with your foot, then hit the pad with the drumstick. The two do not need to be physically connected to replicate this sound.

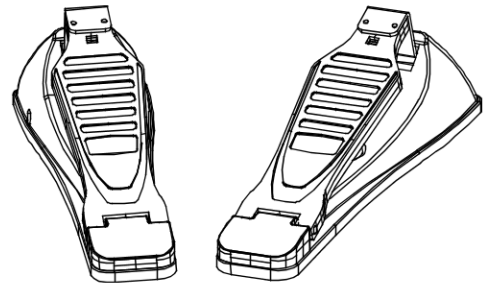

11. Remove the pre-installed screws from the sound module. Attach the module adapter to the bottom of the sound module using the four (4) screws you removed and a Philips screwdriver.
12. Install the module adapter on the remaining clamp, then tighten the knob to secure it in place.
13. Insert the 25-pin connector from the wiring harness into the corresponding slot on the bottom of the sound module. Plug the audio jack connectors into the corresponding ports underneath each of the drum and cymbal pads. Use the straps for efficient cable management.

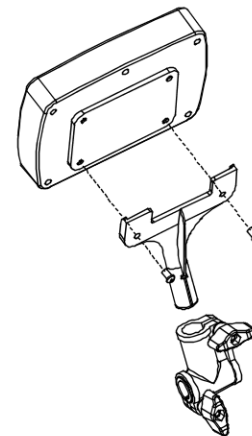

SPECIFICATIONS

Drum & Cymbals:

- Tom pad diameter with mesh: 8" (20.32 cm)
- Snare pad diameter with mesh: 8" (20.32 cm)
- Crash cymbal diameter: 8" (20.32 cm)
- Ride cymbal diameter: 8" (20.32 cm)
- Hi-hat diameter: 8" (20.32 cm)

Sound Module:

- Pre-loaded sounds: 209
- Polyphony notes: 81
- Pre-loaded kits: 20 presets
- Pre-loaded songs: 50, drum mute
- Metronome: on/off, tempo
- Song recording capacity: 1 song
- Sound module display: 3 segment LED
- Sound module power: 9 V, DC
- Connection ports: line-in & line-out, headphones, USB, 12 V, 25-pin connector socket

QUESTIONS OR CONCERNS? WE WANT TO HEAR FROM YOU!

info@lyxpro.com

1-866-849-3049

LyxPro, LyxJam, and their associated logos are trademarks of C&A IP Holdings, LLC. in the U.S.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement or approval.

Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837.

© 2020. C&A IP Holdings, LLC. All Rights Reserved.

LIMITED WARRANTY ON LYXJAM™ 7-PIECE ELECTRONIC DRUM KIT

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

WE WARRANT THAT DURING THE WARRANTY PERIOD, THE PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP.

LIMITATION OF LIABILITY

TO THE EXTENT NOT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. EXCEPT FOR THE EXPRESS WARRANTIES CONTAINED IN THIS LIMITED WARRANTY STATEMENT AND TO THE EXTENT NOT PROHIBITED BY LAW, WE DISCLAIM ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW DISCLAIMERS OF IMPLIED WARRANTIES, SO THIS DISCLAIMER MAY NOT APPLY TO YOU. TO THE EXTENT SUCH WARRANTIES CANNOT BE DISCLAIMED UNDER THE LAWS OF YOUR JURISDICTION, WE LIMIT THE DURATION AND REMEDIES OF SUCH WARRANTIES TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY.

OUR RESPONSIBILITY FOR DEFECTIVE GOODS IS LIMITED TO REPAIR, REPLACEMENT OR REFUND AS DESCRIBED BELOW IN THIS WARRANTY STATEMENT.

WHO MAY USE THIS WARRANTY? TC&A Marketing, Inc. located at 114 Tived Lane East, Edison, NJ (“we”) extend this limited warranty only to the consumer who originally purchased the product (“you”). It does not extend to any subsequent owner or other transferee of the product.

WHAT DOES THIS WARRANTY COVER? This limited warranty covers defects in materials and workmanship of the LyxJam™ 7-piece electronic drum kit (the “product”) for the Warranty Period as defined below.

WHAT DOES THIS WARRANTY NOT COVER? This limited warranty does not cover any damage due to: (a) transportation; (b) storage; (c) improper use; (d) failure to follow the product instructions or to perform any preventive maintenance; (e) modifications; (f) unauthorized repair; (g) normal wear and tear; or (h) external causes such as accidents, abuse, or other actions or events beyond our reasonable control.

WHAT IS THE PERIOD OF COVERAGE? This limited warranty starts on the date of your purchase and lasts for one year (the “Warranty Period”). The Warranty Period is not extended if we repair or replace the product. We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.

WHAT ARE YOUR REMEDIES UNDER THIS WARRANTY? With respect to any defective product during the Warranty Period, we will, at our sole discretion, either: (a) repair or replace such product (or the defective part) free of charge or (b) refund the purchase price of such product if an exchange unit cannot be provided.

HOW DO YOU OBTAIN WARRANTY SERVICE? To obtain warranty service, you must contact us at 1-866-849-3049 or by email at info@lyxpro.com during the Warranty Period to obtain a Defective Merchandise Authorization (“DMA”) number. No warranty service will be provided without a DMA number and return shipping costs to our facilities shall be assumed by you, the purchaser. Shipping costs of the replacement unit to you shall be assumed by us.