

39" LEFT-HANDED CS SERIES ELECTRIC GUITAR User Manual



Introduction

Thank you for purchasing the LyxPro 39" Left-Handed CS Series Electric Guitar. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only. It is not intended for commercial use.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

Contents


- 39" left-handed guitar
- Guitar cable
- 6 picks
- User guide

Safety Precautions

- To avoid the risk of high voltage electric shock, do not attempt to open the guitar.
- Do not attempt to repair the guitar yourself; have it serviced by qualified personnel.
- Before connecting electrical equipment to the main power supply, make sure the outlet voltage corresponds to the voltage stated on the product's rating label.
- For all electrical products, align the plug properly and insert it fully. Do no overload the power outlet. If the power cord is damaged, it must be replaced by the manufacturer or qualified personnel in order to avoid a hazard.
- Do not expose the guitar or cable to any type of liquid or moisture.
- Do not store the guitar in places prone to high humidity, high temperature, dust, or static electricity.
- Do not drop the guitar.
- Do not use strong cleaners or solvents to clean the guitar.

Guitar Parts:

- 1. Tuning pegs
- 2. Truss rod hole
- 3. Nut
- 4. Neck
- 5. Frets
- 6. Pickups
- 7. Body
- 8. Pickup switch
- 9. Volume/tone controls
- 10. Bridge
- 11. Tremolo bar hole
- 12. Output jack

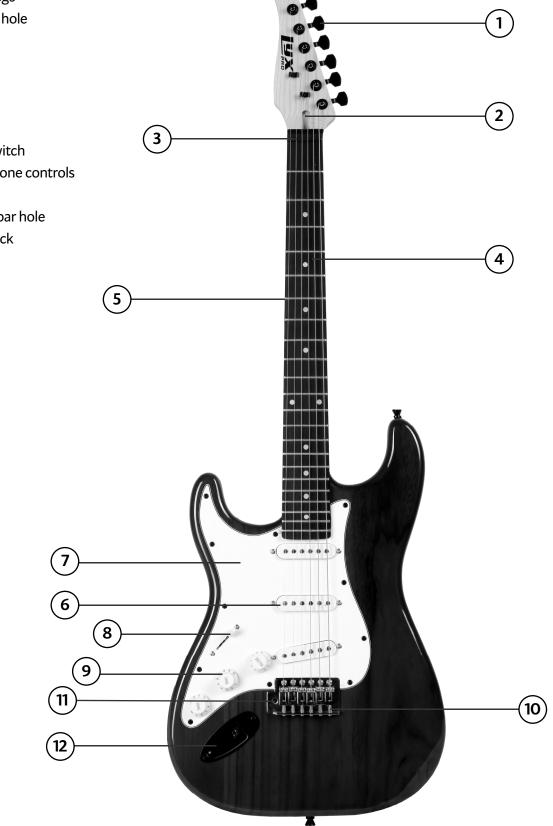

Tuning

Guitars have different headstock shapes, but the basic method to tune your instrument's strings is the same.

For manual tuning, you can use a tuning fork, electronic tuner, pitch pipe, or online tuner or app. Tune from a pitch below the correct pitch up to the correct pitch instead of down from a higher pitch. This eliminates slacking of strings and reduces the chance of strings going out of tune due to slippage as you play.

If you use an A-440 tuning fork or pitch pipe, start by tuning the second thickest string and move to the thinner one by one. After tuning the five strings, go back to the thickest string and tune the string. The following table shows standard tuning.


Guitar

ſ	1st	2nd	3rd	4th	5th	6th (Top)
	E	В	G	D	А	E


Truss Rod Adjustment

Environmental conditions like temperature and humidity, as well as string tension, can cause bowing of the guitar neck. If your instrument has an adjustable truss rod, you can try to adjust it to keep the neck as straight as possible.

Truss rod in "flat" position

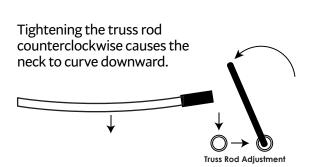

 Tightening the truss rod clockwise causes the neck to curve upward.



Changing Strings

Replace one string at a time.

Unwind the old string at the tuning peg.

Remove the old string through the hole on the back of your guitar.

Insert a new string through the corresponding hole.

Run the string over the neck and the nut.

Feed the string through the hole in the post on the headstock.

Bend the string around the post and wind the string using the tuning peg.

Guitar Care and Maintenance

Keep your instrument in a case or carrying bag when transporting or storing it. Do not place any objects on the top of your instrument. Regularly clean your guitar, including the finger board, with a clean, dry, and soft cloth. Polish the finished surface with an appropriate guitar polish. Humidity and temperature affect your guitar. Avoid exposing it to extreme temperatures, high humidity, and excessively dry environments.

Specifications

Dimensions: 39" x 12.6" x 1.7" Weight: 10.8 lbs. Number of strings: 6 Body shape: Double cutout Body wood: Paulownia wood **Orientation: Left-handed** Neck wood: Canadian maple Joint: Bolt-on Truss rod: Standard Fingerboard material: Engineered wood Number of frets: 22 Inlays: Dots Pickup controls: 5 way Control dials: Master volume, Tone 1, Tone 2 Bridge: Tremolo / vibrato Product type: Electric guitar Location: Indoor or outdoor use Installation required: No Adult assembly required: No Additional tools required: No Country of origin: China Warranty included: Yes Warranty length: 1 year

Customer Service: info@lyxpro.com 866-849-3049

> C&A Marketing, Inc. 114 Tived Lane East Edison, NJ 08837 USA info@lyxpro.com MADE IN CHINA LyxPro is a trademark of C&A IP Holdings LLC. All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

www.lyxpro.com

©2021. All Rights Reserved.

LIMITED WARRANTY TO ORIGINAL CONSUMER

This LyxPro 39" Left-Handed CS Series Electric Guitar ("Product"), including any accessories included in the original packaging, as supplied and distributed new by an authorized retailer is warranted by C&A Marketing, Inc. (the "Company") to the original consumer purchaser only, against certain defects in material and workmanship ("Warranty") as follows:

To receive Warranty service, the original consumer purchaser must contact the Company or its authorized service provider for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to the Company or its authorized service provider in order to obtain the requested service.

Service options, parts availability, and response times may vary and may change at any time. In accordance with applicable law, the Company may require that you furnish additional documents and/or comply with registration requirements before receiving warranty service. Please contact our customer service for details on obtaining warranty service:

Phone: 1-866-849-3049

Email: info@lyxpro.com

Shipping expenses to the Company's Return Facility are not covered by this warranty, and must be paid by the consumer. The consumer likewise bears all risk of loss or further damage to the Product until delivery to said facility.

EXCLUSIONS AND LIMITATIONS The Company warrants the Product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser ("Warranty Period"). If a hardware defect arises and a valid claim is received within the Warranty Period, the Company, at its sole option and to the extent permitted by law, will either (1) repair the Product defect at no charge, using new or refurbished replacement parts, (2) exchange the Product with a Product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original device, or (3) refund the purchase price of the Product.

A replacement Product or part thereof shall enjoy the warranty of the original Product for the remainder of the Warranty Period, or ninety (90) days from the date of replacement or repair, whichever provides you longer protection. When a Product or part is exchanged, any replacement item becomes your property, while the replaced item becomes the Company's property. Refunds can only be given if the original Product is returned.

This Warranty does not apply to:

(a) Any non-LyxPro 39" Left-Handed CS Series Electric Guitar product, hardware or software, even if packaged or sold with the Product; (b) Damage caused by use with non-LyxPro 39" Left-Handed CS Series Electric Guitar products;

(c) Damage caused by accident, abuse, misuse, flood, fire, earthquake, or other external causes;

(d) Damage caused by operating the Product outside the permitted or intended uses described by the Company;

(e) Damage caused by third party services;

(f) A Product or part that has been modified to alter functionality or capability without the written permission of the Company;

(g) Consumable parts, such as batteries, fuses, and bulbs;

(h) Cosmetic damage; or

(i) If any LyxPro 39" Left-Handed CS Series Electric Guitar serial number has been removed or defaced.

This Warranty is valid only in the country where the consumer purchased the Product, and only applies to Products purchased and serviced in that country.

The Company does not warrant that the operation of the Product will be uninterrupted or error-free. The Company is not responsible for damage arising from your failure to follow instructions relating to its use.

NOTWITHSTANDING ANYTHING TO THE CONTRARY AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE COMPANY PROVIDES THE PRODUCT "AS-IS" AND "AS-AVAILABLE" FOR YOUR CONVENIENCE AND THE COMPANY AND ITS LICENSORS AND SUPPLIERS EXPRESSLY DISCLAIM ALL WARRANTIES AND CONDITIONS, WHETHER EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, QUIET ENJOYMENT, ACCURACY, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. THE COMPANY DOES NOT GUARANTEE ANY SPECIFIC RESULTS FROM THE USE OF THE PRODUCT, OR THAT THE COMPANY WILL CONTINUE TO OFFER OR MAKE AVAILABLE THE PRODUCT FOR ANY PARTICULAR LENGTH OF TIME. THE COMPANY FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE.

YOU USE THE PRODUCT AT YOUR OWN DISCRETION AND RISK. YOU WILL BE SOLELY RESPONSIBLE FOR (AND THE COMPANY DISCLAIMS) ANY AND ALL LOSS, LIABILITY, OR DAMAGES RESULTING FROM YOUR USE OF THE PRODUCT.

NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY YOU FROM THE COMPANY OR THROUGH ITS AUTHORIZED SERVICE PROVIDERS SHALL CREATE ANY WARRANTY.

IN NO EVENT WILL THE COMPANY'S TOTAL CUMULATIVE LIABILITY ARISING FROM OR RELATED TO THE PRODUCT, WHETHER IN CONTRACT OR TORT OR OTHERWISE EXCEED THE FEES ACTUALLY PAID BY YOU TO THE COMPANY OR ANY OF ITS AUTHORIZED RESELLERS FOR THE PRODUCT AT ISSUE IN THE LAST YEAR FROM YOUR PURCHASE. THIS LIMITATION IS CUMULATIVE AND WILL NOT BE INCREASED BY THE EXISTENCE OF MORE THAN ONE INCIDENT OR CLAIM. THE COMPANY DISCLAIMS ALL LIABILITY OF ANY KIND OF ITS LICENSORS AND SUPPLIERS. IN NO EVENT WILL THE COMPANY OR ITS LICENSORS, MANUFACTURERS AND SUPPLIERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA, OR RECORDS) CAUSED BY THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT.

Nothing in these terms shall attempt to exclude liability that cannot be excluded under applicable law. Some countries, states, or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so certain limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.