



TELECASTER ELECTRIC GUITARS

User Manual



Introduction

Thank you for purchasing the LyxPro® Telecaster Electric Guitars. This user guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this user guide may void the limited warranty.

Please read all directions carefully before using the product and retain this guide for reference. This product is intended for household use only. It is not intended for commercial use.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

Contents


- Full-size 39" electric guitar
- 2 picks
- User guide

Safety Precautions

- To avoid the risk of high voltage electric shock, do not attempt to open the product.
- Do not attempt to repair the product yourself; have it serviced by qualified personnel.
- Before connecting electrical equipment to the main power supply, make sure the outlet voltage corresponds to the voltage stated on the product's rating label.
- Do not expose the product, power cords, and plugs to any type of liquid or moisture. Do not touch the product with wet hands.
- Switch off and unplug the product when it is not in use.
- Do not store your product in places prone to high humidity, high temperature, dust, or static electricity.
- Do not drop the product.
- Do not use strong cleaners or solvents to clean the product.

Guitar Parts:

1. Tuning pegs
2. Headstock
3. Truss rod hole
4. Nut
5. Neck
6. Fretboard
7. Frets
8. Pickups
9. Strap post
10. Pickguard
11. Body
12. Pickup selector
13. Volume/tone controls
14. Bridge

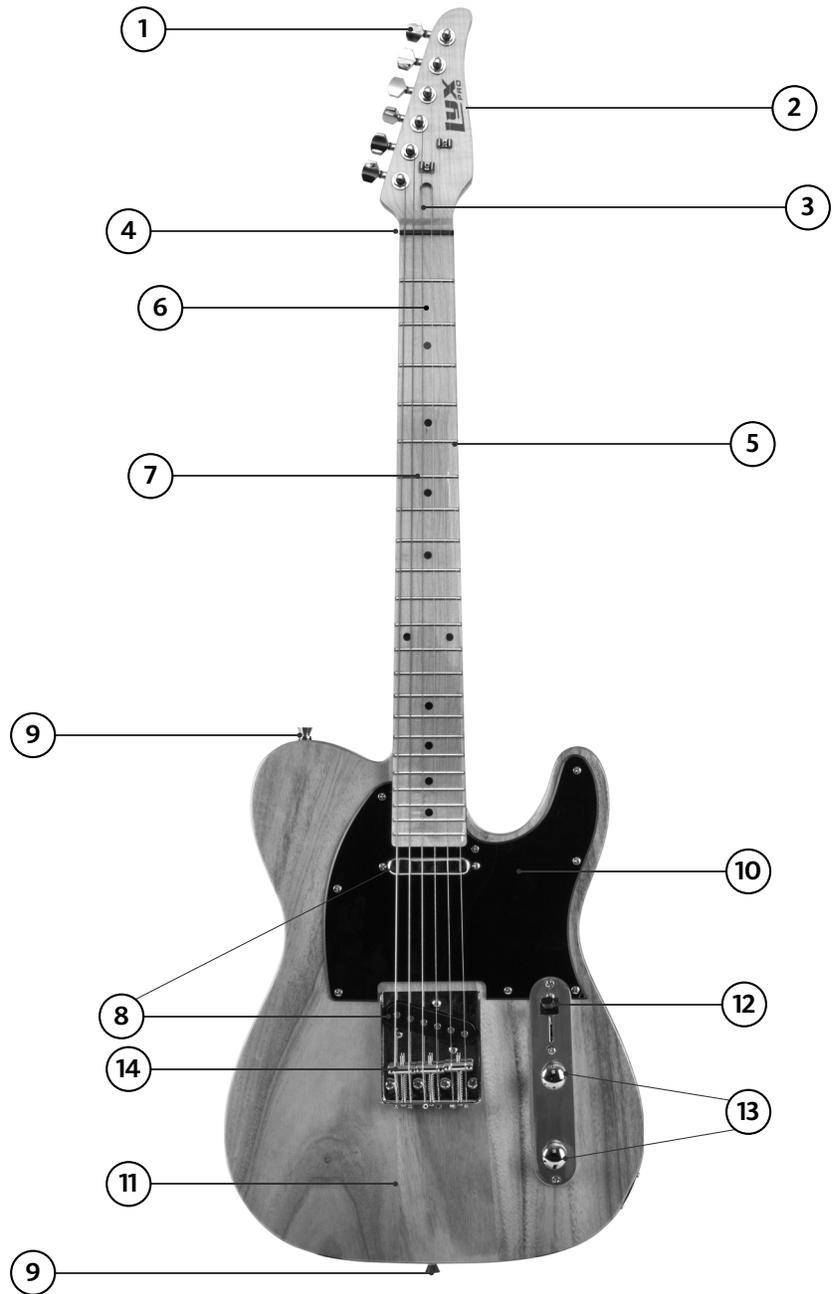

Tuning

Guitars have different headstock shapes, but the basic method to tune your instrument's strings is the same.

For manual tuning, you can use a tuning fork, electronic tuner, pitch pipe, or online tuner or app. To tune your guitar, start at a lower pitch below your desired pitch instead of starting at a higher pitch. This eliminates slacking of strings and reduces the chance of strings going out of tune due to slippage as you play.

If you use an A-440 tuning fork or pitch pipe, start by tuning the second thickest string and move through the increasingly thinner strings by one. After tuning the five strings, go back to the thickest string and re-tune it one final time. The following table shows standard tuning.


Guitar

6th (Top)	5th	4th	3rd	2nd	1st
E	A	D	G	B	E


Truss Rod Adjustment

Environmental conditions like temperature and humidity, as well as string tension, can cause bowing of the guitar neck. If your instrument has an adjustable truss rod, you can try to adjust it to keep the neck as straight as possible.

 
Truss rod in "flat" position



Tightening the truss rod counterclockwise causes the neck to curve downward.

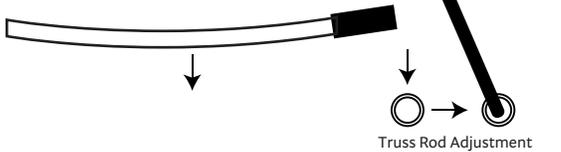

Tightening the truss rod clockwise causes the neck to curve upward.

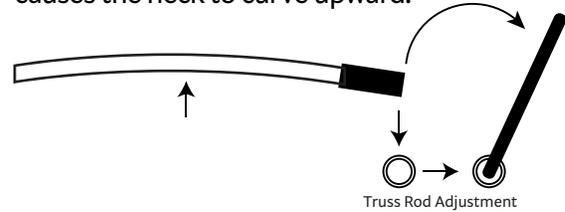

Changing Strings

1. Remove one string at a time. (Extra strings not included)
2. Unwind the old string at the tuning machine.
3. Remove the old string through the hole on the back of your guitar.
4. Insert a new string through the corresponding hole.
5. Run the string over the neck and the nut.
6. Feed the string through the hole in the tuning machine.
7. Bend the string around the post and wind the string using the tuning peg.

Guitar Care and Maintenance

- Keep your instrument in a case or carrying bag when transporting or storing it.
- Do not place any objects on the top of your instrument.
- Regularly clean your guitar, including the finger board, with a clean, dry, soft cloth.
- Polish the finished surface with an appropriate guitar polish.
- Humidity and temperature affect your guitar. Avoid exposing it to extreme temperatures, high humidity, and excessively dry environments.

Customer Service:

info@lyxpro.com

866-849-3049

LIMITED WARRANTY ON LYXPRO® TELECASTER ELECTRIC GUITAR

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

WE WARRANT THAT DURING THE WARRANTY PERIOD, THE PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP.

LIMITATION OF LIABILITY

TO THE EXTENT NOT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. EXCEPT FOR THE EXPRESS WARRANTIES CONTAINED IN THIS LIMITED WARRANTY STATEMENT AND TO THE EXTENT NOT PROHIBITED BY LAW, WE DISCLAIM ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW DISCLAIMERS OF IMPLIED WARRANTIES, SO THIS DISCLAIMER MAY NOT APPLY TO YOU. TO THE EXTENT SUCH WARRANTIES CANNOT BE DISCLAIMED UNDER THE LAWS OF YOUR JURISDICTION, WE LIMIT THE DURATION AND REMEDIES OF SUCH WARRANTIES TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY.

OUR RESPONSIBILITY FOR DEFECTIVE GOODS IS LIMITED TO REPAIR, REPLACEMENT OR REFUND AS DESCRIBED BELOW IN THIS WARRANTY STATEMENT.

WHO MAY USE THIS WARRANTY? C&A Marketing, Inc. located at 114 Tived Lane East, Edison, NJ (“we”) extend this limited warranty only to the consumer who originally purchased the product (“you”). It does not extend to any subsequent owner or other transferee of the product.

WHAT DOES THIS WARRANTY COVER? This limited warranty covers defects in materials and workmanship of the LyxPro® Telecaster Electric Guitar (the “product”) for the Warranty Period as defined below.

WHAT DOES THIS WARRANTY NOT COVER? This limited warranty does not cover any damage due to: (a) transportation; (b) storage; (c) improper use; (d) failure to follow the product instructions or to perform any preventive maintenance; (e) modifications; (f) unauthorized repair; (g) normal wear and tear; or (h) external causes such as accidents, abuse, or other actions or events beyond our reasonable control.

WHAT IS THE PERIOD OF COVERAGE? This limited warranty starts on the date of your purchase and lasts for one year (the “Warranty Period”). The Warranty Period is not extended if we repair or replace the product. We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.

WHAT ARE YOUR REMEDIES UNDER THIS WARRANTY? With respect to any defective product during the Warranty Period, we will, at our sole discretion, either: (a) repair or replace such product (or the defective part) free of charge or (b) refund the purchase price of such product if an exchange unit cannot be provided.

HOW DO YOU OBTAIN WARRANTY SERVICE? To obtain warranty service, you must contact us at 866-849-3049 or by email at info@lyxpro.com during the Warranty Period to obtain a Defective Merchandise Authorization (“DMA”) number. No warranty service will be provided without a DMA number and return shipping costs to our facilities shall be assumed by you, the purchaser. Shipping costs of the replacement unit to you shall be assumed by us.

www.lyxpro.com

C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837 USA

info@lyxpro.com

MADE IN CHINA

LyxPro and the LyxPro logo are trademarks of C&A IP Holdings, LLC.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

©2020 All Rights Reserved.