



# ALTO SAXOPHONE

## Maintenance Guide



ISX-101

Thank you for purchasing the LyxJam Alto Saxophone. This Maintenance Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

## **Box contents**

Alto saxophone

Neck strap

Maintenance guide

Mouthpiece

Cleaning cloth

Cleaning rod

Gloves

Carrying case

Removable straps for carrying case

10 reeds

Cork grease

## Assembly

1. Insert the neck into the body with a gentle twisting motion. Then tighten the neck screw enough so that the neck is stationary.
2. Lubricate the neck cork with cork grease.
3. Hold the neck and attach the mouthpiece with a gentle twisting motion, leaving  $\frac{1}{4}$  to  $\frac{1}{2}$  of the cork exposed.



4. Place the neck strap around your neck and attach the hook to the ring on the saxophone body.

## Caring for your instrument

- Each time you finish playing, remove all moisture and particles from the bore of each joint using a swab or cleaning rod. Use a polishing cloth to wipe off perspiration and fingerprints. Do not use chemical or solvent agents to clean the finish of your instrument.
- Saxophone players should use cork grease on all cork joints to preserve the resilience of the cork. This will make assembling the instrument easier and retain a good cork fit.
- Use a cleaning brush to remove dirt or lint that gathers around springs and under the keys. Use caution in cleaning under the key mechanisms to avoid unhooking the needle springs or damaging bumper corks.
- Always remove the mouthpiece when not in use. Clean your saxophone mouthpiece at least once a week, brushing out the inside with a mouthpiece brush and warm soapy water. Rinse with cold water and dry.





**LYX**<sup>™</sup>  
JAM

**Alto Saxophone**  
LYXISX101

**Customer Service**

info@lyxpro.com | 866-849-3049

[www.lyxpro.com](http://www.lyxpro.com)

C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837 USA  
C&A Marketing UK LTD, 167 Hermitage Road, Crusader Industrial Estate, London N4 1LZ, UK

info@lyxpro.com

MADE IN CHINA

LyxPro is a trademark of C&A IP Holdings, LLC. ©2017 All Rights Reserved